



LIGHT TRIM

Solutions de revêtement
Siding Solutions

Guide d'utilisation




T001


Gabarit d'installation pour panneaux de fibrociment

Exclusif pour les moulures horizontales Light Trim H001-H002-S002

1

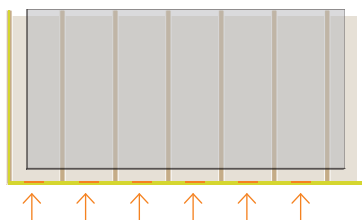


Pour les panneaux **à l'horizontal**, placer un gabarit sur la moulure Light Trim entre chaque latte (aux 16 pouces).

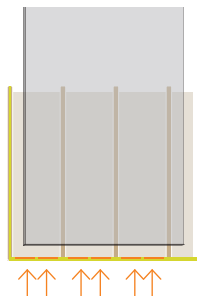


Pour les panneaux utilisés **à la verticale**, placer 2 gabarits entre chaque latte.

2

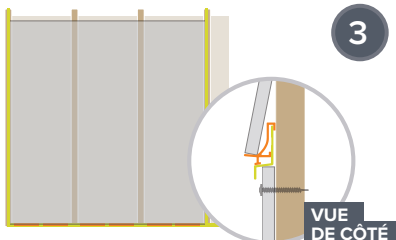


Déposer le panneau sur les gabarits.

3

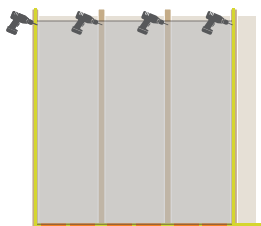


Visser le haut du panneau.

4

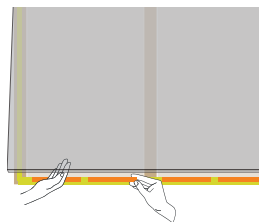

Tirer légèrement le panneau pour retirer les gabarits.

5

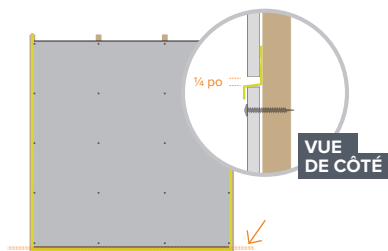

Compléter le vissage.

L'espace de $\frac{1}{4}$ po de dégagement entre le panneau et la moulure horizontale Light Trim est parfaitement respecté.

*

Recommandé pour l'installation de panneaux de fibrociment avec les moulures verticales clippées (J002, V920, V099, C994).




T001


Installation template for fiber cement panels

Exclusively for Light Trim horizontal trims H001-H002-S002

1

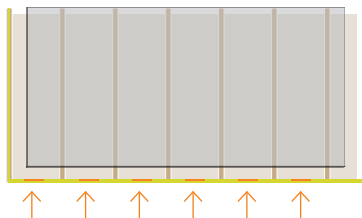


For **horizontal** panels, place a template on the Light Trim trim between each lath (every 16 inches).

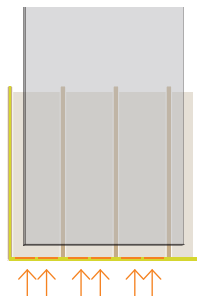


For panels that are used **vertically**, place two templates between each lath.

2

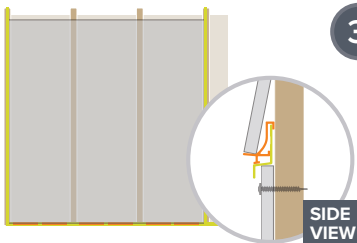


Place the panel on the templates.

3

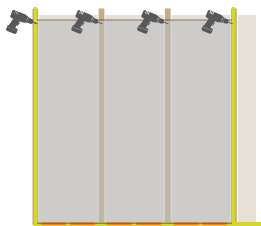


Screw on the top of the panel.

4

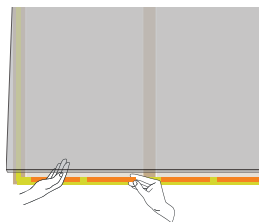

To remove the templates, gently pull on the panel.

5

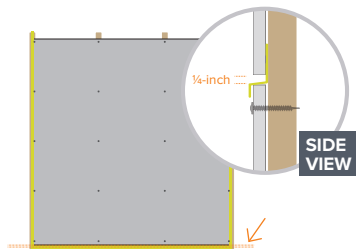

Finish screwing it on.

The 1/4-inch clearance between the panel and the Light Trim horizontal trim is perfectly observed.



Recommended for installing fiber cement panels with **CLIP** vertical trim (J002, V920, V099, C994).